
Product instruction manual

Simple-Fanshion-Quality life

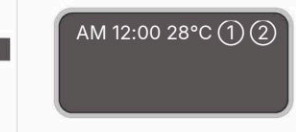

LED music alarm clock

Volume adjustment:
In normal time mode, press the button to adjust the volume, press any button on the back to complete the configuration

Music mode:
In normal time mode, press the music button (the icon ♫) to play music and it will last 5 minutes.The wake-up(accompaniment function Dream brainwave provides 13 pre-set soothing music. for sleep assistance.

Brightness adjustment:
In normal time mode, press the 'SNOOZE/LIGHT' button on the side. top to adjust the brightness.

Intelligent voice control function:
The ambient noise reaches 90 decibels and it lightly knocks on the table. The alarm clock is set, you can turn on the clock's screen and it will... It will turn off after 6 seconds.

Note: In USB charging mode, the intelligent voice control function is off, enter the long power-on mode.

Low battery warning:
If while in use, the battery indicator flashes or the music does not play In full, it means that the battery level is low, charge it through US. The LED indicator is always on when the product is charging and turns off when it is finished. automatically after it is fully charged.
Note: fully charge the battery before using it.

Reset:
Siel productoofcioacorcmnioelbotn"eincir"aicl


Daily maintenance:
Use a tissue or soft cloth to clean the watch.
Keep the watch clean and dry for it to function normally.

Environmental Protection:
The electronic product must be disposed of in accordance with laws and regulations. related; take the broken product to the nearest collection point to its elimination,

Warning: Do not disassemble the product yourself!Change the battery properly
Incorrect operation may cause an explosion hazard!

15

Correct

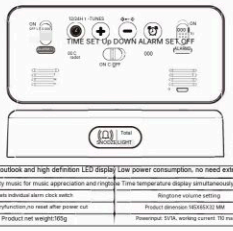

Simple outlook and high definition LED display Low power consumption, no need external power supply Presione el boton "ALARM" para entrar en la configuracion de la alarma 1, seleccione

13 high quality music for music appreciation and ringtone	Time temperature display simultaneously
2 sets individual alarm clock switch	Ringtone volume setting
Memory function,no reset after power cut	Product dimension 145X65X32 MM
Product net weight:165g	Powerinput: 5V1A, working current: 110 ma

Power on:
Power on switch on, the alarm clock is on.

Time setting:
Long press "TIME SET.button for 3 seconds,the 'hour' icon will flicker on the LCD Press+/- button to adjust the hour. Press "TIME SET "button again,the "minute icon will flicker on the LCD. Press +/- button to adjust the minute. Press 'TIME SET' button again to end the time setting.

Charging:
Only use the usb cablecor 5v-1A/5v-2A adapter ro charging (5v-1Ais better. Higher-output adapter will burn out the circuit of the device.

1


Security guarantee 2 alarms:
Press the "ALARM Setting" button and hold it down for 3 seconds. seconds to enter alarm configuration 1.
Press the "+" button or to set the alarm time 1, pay attention to the AM/PM configuration.Press the 'ALARM' button again, the indicator minutes after the alarm flashes.
Press the "+" or button to set the minutes of alarm 1.
Press the "ALARM" button to select alarm music tones.
Press "+"- or "-" to select the music ringtone for alarm 1.
Note: When setting alarm 1, the "time" icon will flash.
Press the "ALARM Setting" button to complete the tone setting. alarm tone 1 and enter the alarm time setting 2. The "time" icon will flash.
Press the "+" or "-" button to set the alarm time 2 and pay attention to the AM/PM configuration.
Press the 'ALARM' button again, the alarm minute indicator will flash.
Press the "+" or button to set the minutes of alarm 2.
Press the "ALARM Setting" button to complete the configuration.
Observation: When setting alarm 2, the 'time' icon will flash.

Alarm switch:
Switch the "alarm 1" switch to the "on" position, the icon will appear. If you change the switch from "alarm 1" to "off", the tl icon will turn off. The configuration method for alarm 2 is the same as that for alarm 1. When the alarm sounds, the alarm icon will flash, press any button on Press the back button to turn off the alarm, the alarm will last for 2 minutes.

Repetition mode:
While the alarm is sounding, press the SNOoZE button to pause the alarm and the icon If the alarm is flashing, the alarm will sound after 5 minutes, press any button on the back of the watch to turn off the alarm.

Temperature display mode:
In normal time mode, press the button to change the degree display. Celsius and degrees Fahrenheit.

Change of time system mode from 12/24 hours:
Enelmodohoormieraameebovsmbrreloo
12-hour and 24-hour time system.In the 12-hour mode, 'AM' and 'PM' will be displayed.

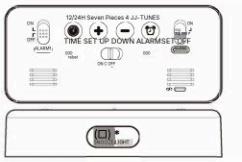

Simple design and high-definition LED display Low energy consumption, no external power source needed

2combinacionesdelarmadividuales	Adjustment of the volume of the dial tone
Memory function,no reset after power cut	Product dimension: 145X65X32 MM
Net weight of the product: 165g	Input power: 5V1A Working current: 110mA

13 high-quality musical tones and ringtone Simultaneous temperature display

Power on:
Power on, switch on, the alarm clock is on.

Time setting:
Press and hold the "TIME SET" button for 3 seconds, the 'time' icon will appear. It will flash on the LCD screen. Press the +/- button to set the time. Press the "TIME SET" button again, the "minutes" icon will flash on the screen. LCD screen.Press the +/- button to adjust the minutes. Press the 'TIME SET' button again to finish setting the time.

charging:
Just use the USB cable or 5v-1A/5v-2A adapter for charging (5v-1A is better).In normal time mode, quickly press + button twice to shift between 12 hours and 24 hours time system mode.In 12 hours mode, "AM" and "PM" will be displayed. The upper output adapter will burn out the device's circuit.

13

2 sets alarm setting:
Press "ALARMsetting"button and hold for3seconds to enter alarm 1setting. Press" "+"or"-"button to adjust hourof alarm 1,and pay atention to AM/PM setting. Press "ALARM" button again,the alarm minute will flicker. Press "+"or "-" button to adjust minute of alarm 1. Press "ALARM button to enter alarm 1 music ringtone select, press "+" or "-"to select music ringtone for alarm 1. Remark: Setting the alarm the "time" icon will flicker. Press "ALARM setting" button to end the setting of alarm 1 music ringtone and enteralarm 2 time setting.The "hour" icon will flicker. Press "+"or""button toadjust hour of alarm 2,and pay attention to AM/PMsetting. Press "ALARM" button again, the alarm minute will flicker. Press "+"or "-" button to adjust minute of alarm 2. Press "ALARM" buttontoenter alarm1music ringtone select,press "+"or"-"to select music ringtone for alarm 2. Press "ALARM setting" button to end the setting Remark: Setting the alarm 2 the "time" icon will flicker.

Alarm switch:
Switch the "alarm 1" switch to "on" position,the icon will show . If switchthe "alarm 1"switch to"off"position,theicon will be off. The setting method of alarm 2 is same as alarm 1.

Snooze mode:
During the alarm is ringing, press SNOOZE button can pause the alarm and the alarm icon willflicker,the alarmwill beringingafter5minutes,pressany buttononthe clock back can turn off the alarm.

Temperature display mode:
In normal time mode, press-button to shift degree Celsius and degree Fahrenhei display.

12/24 hours time system mode shift:
hours time system mode.In 12 hours mode, "AM" and "PM" will be displayed.

2

Volume setting:
In normal time mode,press button to adjust the volume,press any button at the back to end the setting.

Music mode:
In normal time mode, press the music button (icon ♫) to play music and it will last for 5 minutes.In "normal" mode, press the "music" button (music note icon) to Brain wave sleep companion/wake up function provide 13 default soft music for sleep ascoltare musica.There are 13 default ringtones to accompany you to sleep or companion. as an alarm clock function.

Lightness adjustment :
In normal time mode, press the button 'SNOOZE/LIGHT' on the top can adjust the lightness.

Intelligent voice control function :
If the ambient noise reaches 90 decibels or the alarm clock "knocks" the desktop slightly. is placed on can awaken the clock display and will be off after 6 seconds.

Remark: In USB charging mode, the voice control function is disabled. long on mode.

Low power reminder:
When using this product, the battery indicator is flashing or the music is not playing fully, the device will not function at maximum performance because it is out of battery.Please do it represents low power, please charge via USB, The LED indicator is always on when ricaricarlo via USB.The LED indicator will remain on throughout the entire charging period. the product ischarging and automatically turns offafter fully charged. and it will turn off automatically when the battery is fully charged. Remark: Please charge the battery fully before use. Remember: Fully charge the battery before using the alarm clock.

Reset:
Ifthe product is malfunctioned,please try to press the "reset"buttonto restart the clock.If the product has a malfunction, please click the "RESET" button to reset the alarm.

Daily maintenance:
Please use soft tissue or cloth to clean the clock. It is recommended to use non-aggressive products to clean the screen of your device. Keep the alarm clock clean and dry to function normally. Keep the alarm clock dry and clean for normal operation.

Environment protection:
Electronic products should be disposed of according to the relevant laws and regulations. please take the broken product to the nearest collecting point for disposal.

Warning: Please do not disassembly the product by yourself!Change the wrong batterymyght cause explosion hazard!

3

Volume Setting:
In "normal" mode, press "-" to adjust the volume as desired, then press any button. button to end the operation.

Music mode:
In "normal" mode, press the "music" button (music note icon) to play music and it will last for 5 minutes.There are 13 default ringtones to accompany you to sleep or as an alarm clock function.

Adjust the brightness:
In "normal" mode, press the "SNOOZE/LGHT" button with which you can adjust the brightness.

Voice control function:
display can activate the watch display, which will turn off after 6 seconds.

Low-power reminder:
When using this product, if the battery indicator light flashes or beeps, the and it will turn off automatically when the battery is fully charged. Please charge the battery before using the alarm clock.

Reset:

Daily maintenance:
It is recommended to use non-aggressive products to clean the screen of your device. Keep the alarm clock dry and clean for normal operation.

Environmental protection:
Regulations impose restrictions on foreign investors. at the right collection points.

ATTENTION: Please do not disassemble the product by yourself!Change the battery with A wrong one could lead to the explosion of the product!

12

Alarm setting
Press the "ALARM setting" button and hold it for 3 seconds to access. at the setting of the first alarm (alarm1).
Press the "+" or "-" buttons to set the alarm time for Alarm1, be careful. at the AM/PM setting (day/night).
Press the "ALARM" button again, and the minute section will start flashing.
Press the "+ or "0" buttons to set the minutes of Alarm 1.
Press the "ALARM" button to enter the Alarm1 ringtone section.
Press "+" or "-" to select the alarm sound "alarm1".
Remark: When setting the alarm, the hour indicator will flash.
Press the "ALARM setting" button to finish setting the alarm sound. first alarm and then you can set the second alarm (alarm2) The time icon will start flashing.
Press the "+" or "-" buttons to set the alarm time for Alarm2, be careful. at the AM/PM setting (day/night).
Press the "ALARM" button again, the minute icon will start flashing.
Press the "+" and "-" buttons to set the minutes of Alarm 2.
Press the "ALARM" button to enter the Alarm2 ringtone section.
Press "+" or "-" to select the alarm sound "alarm2".
Press the "Alarm setting" button to complete the setting.
Remark: When setting the alarm, the 2 o'clock indicator will flash.


Change the alarm clock:
Move the alarm switch to "on", the alarm sound will appear.
Setting the alarm to "off" will make the alarm icon ? disappear.
To set alarm 2 use the same method as for alarm 1.
When the alarm is ringing, the alarm icon will also light up, press a Press any button and the alarm will sound again after 2 minutes.

Change the alarm clock:
Move the alarm switch1 to "on", the alarm sound will appear.
Setting the alarm to "off" will make the alarm icon disappear.
To set alarm 2 use the same method as for alarm 1.
When the alarm is ringing, the corresponding icon will also light up, press the "Time Set" button again.The "Minute" symbol is flashing on the LCD. any, and the alarm clock will sound again after 2 minutes. Press +/- to set the minute. Press the "Time Set" button again to end the time setting.

Temperature on the display:
In "normal" mode, press the button to switch from degreas Celsius to degrees Fahrenheit. Fahrenheit is visible on the display.

How to change the 12/24 hour mode:
In "normal" mode, quickly press the "+" button twice to change the system. visualize the "AM" and "M" elements in 1-2 hours.

11

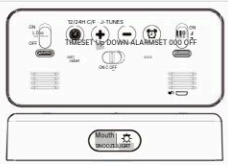

Simple view and high-resolution LED display	Low power consumption No external power supp
High-quality music for musician recognition and simultaneous display of ringtone, time, and temperature.	
2 Set the individual alarm clock	Setting the Ringtone Volume
Memory function, no reset after power failure. Product dimensions 145x65x32 mm.	
Produktnettogewicht: 165 g	Power Consumption: 5V1A Operating Current: 110mA

TIME SETTING:
If you hold down the "Time Set" button for 3 seconds, the light flickers. Hour symbol on.

Regarding the LCD:
Press the +/- button to set the hour.

STORE:
Use only the USB cable adapter 5V-1A/5V-2A for charging (5V-1A is better). The high-power adapter burns out the device's circuit.

4

Set 2 Alarms :
Press and hold the 'ALARM-Setting' button for 3 seconds. to access the settings for Alarm 1.
Press the "+" or "-" button to set the alarm time to 1, and pay attention on the AM/PM setting.
Press "+" or "-" to set the minutes.
Press "ALARM" to select the muscle group, and press "+" or "-". to select the music tone for the selection.
Reminder: Setting the "Time"
Press the "ALARM Setting" button to adjust the alarm music ringtone. to end and enter the time setting for Alarm 2. The "hour" symbol is flickering.
Press the "+" or "-" button to set the hour for Alarm 2, and make sure Switch to the AM/PM setting.Press the 'ALARM' button again. to flash the alarm minute.
Press the '+' or '-' button to set the alarm minute to 2.
Press the 'ALARM' button to select the music ringtone for Alarm 1. and press "+" or "-" to select the music ringtone for Alarm 2.Simple and high-definition LED display perspective Low energy consumption does not require electrical power etc.
Press the "ALARM Setting" button to end the setting.
Note: When you set alarm 2, the "time" symbol flickers.

Alarm switch:
Turn the "Alarm 1" switch to "On".The symbol is displayed. If you set the "Alarm" switch to "Off," the symbol will be off.
The setting method for Alarm 2 is the same as for Alarm 1.


When the alarm rings, the alarm symbol flashes. Press any button to power on:
on the back to turn off the alarm.The alarm lasts for 2 minutes.

Snooze mode:
While the alarm is ringing, press SNOOZE.You can stop the alarm and set the time:
The alarm symbol is flashing.The alarm rings after 5 minutes.Press one Press any button on the back to turn off the alarm.

Temperature display mode:
In normal time mode, press the "pres-s" button to set the Celsius degree and then press "nuovo" to complete the operation. Move the Fahrenheit degree to the display.

12/24 hour time mode switch:
In normal time mode, quickly press the + button twice to switch between dm (5V-1A). A higher-power adapter could cause damage. Switch between the 2-hour and 24-hour time system modes.In the 12-hour mode of the product circuitry. so "AM" and "PM" are displayed.

5

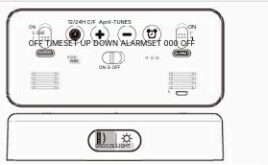

13 high-quality ringtones and music to enjoy. Simultaneous display of time and temperature.	
2 individual alarm settings	Alarm volume adjustment
Memory function, does not reset in case of power failure. Product dimensions: 145×65×32mm	
Net weight of product: 165g Power input: 5V1A, working current: 110mA	

Alarm setting:
Press the "Alarm Setting" button and hold it down for 3 seconds. seconds to access the setting of the first alarm (Alarm1).
Press the "+" or "-" buttons to set the alarm time, then proceed. has AM/PM (day/night) setting.
Press the "ALARM" button again, the minutes section will start flashing.
Press the "+" or "-" buttons to set the minutes of alarm 1.
Press the "ALARM" button to access the chime section of alarm 1.
Press the "+" or "-" button to select the alarm sound 1.
Note: When alarm 1 is activated, the time icon flashes.
Press the "Alarm Setting" button to complete the ringtone adjustment. of the first alarm, then you can set the second alarm (alarm2). The time icon starts flashing.
Press the "+" or "-" button to set the alarm time, be careful with the AM/PM setting (day/night).
Press the "ALARM" button again, the minute icon starts flashing.
Press the "+" or "-" button to set the alarm minutes2.
Press the "+" or "-" button to access the alarm 2 ringtone section
Press the "+" or "-" buttons to select the alarm sound 2.
Press the "Alarm Setting" button to complete the setting.

Change the alarm clock:
Turn the alarm clock switch1 to "on", The alarm clock icon appears.
To set Alarm 2, use the same method as for Alarm 1.
When the alarm sounds, the alarm light also turns on. Press any button. that button and the alarm will sound again after 2 minutes.

Change the alarm clock:
Move the alarm switch1 to "on", The alarm sound will appear.
If the alarm is deactivated, the alarm sound ? disappears.
To set Alarm 2, use the same method as for Alarm 1.
When the alarm is triggered, the alarm light also turns on. any button and the alarm will sound again after 2 minutes.

Temperature on the screen:
In "normal" mode, press the button to switch from degrees Celsius to degrees Fahrenheit. Fahrenheit is visible on the screen.

How to change the 12/24 hour mode:
In "normal" mode, quickly press the "+" button twice to change the system.
Displays the time from 12 AM to 24 PM. In 12-hour mode, you will see "AM" and "PM" on the screen.

8

Volume adjustment:
In "normal" mode, press the "s-" button to adjust the volume as you wish. Press any key to end the operation.

Music mode:
In "normal" mode, press the "music" button (music note icon) to play it. To listen to music, there are 13 default ringtones to accompany you, and they last for 5 minutes.The brain-wave sleep companion/wake-up function offers 3 standard quiet music options for the sleep companion. sleep or as an alarm function.

Adjust the brightness:
In "normal" mode, press the "SNOOZE/LIGHT" button with which you You can adjust the brightness.

Voice control function:
If the ambient noise reaches 90 decibels or if the voice "knocks" slightly on the screen. It can trigger the clock display, which turns off after 6 seconds.

Reminder: In charging mode, the voice function is disabled.

Low power reminder:
When you use this product, if the battery indicator light flashes or beeps, The device will not operate at full capacity because it is out of charge. Please recharge it. Recharge via USB. The LED indicator remains on for the entire duration of the USB charging.The LED indicator will turn off automatically when the product is charging. and turns off automatically when the battery is fully charged. Reminder: Fully charge the battery before using the alarm clock.

Reset to zero:
If the product is malfunctioning, please click the "RESET" button to reset the alarm clock.

Daily maintenance:
Please use non-aggressive products to clean the alarm clock and its screen. Keep the alarm clock dry and clean for normal operation.

Environmental protection:
Electronic devices may be disposed of in accordance with regulations. and regulations imposed by law.Please dispose of the products. broken/used at the appropriate collection points.

ATTENTION: Please do not disassemble the product yourself!Regarding the warning: Using another battery may cause the product to explode!

9

Volume setting:
and press any button on the back to change the setting.

'Music mode:
In "normal" mode, press the "music" button (music note icon) to play it. The brain-wave sleep companion/wake-up function offers 3 standard quiet music options for the sleep companion.

Helligkeitseinstellung :
In normal time mode, press the "SNOOZE / LIGHT" button at the top to turn on the Adjust brightness.

g-Intelligent voice control function:
If the ambient noise reaches 90 decibels or it knocks lightly on the desktop. on which the alarm clock is set, the clock display can be activated and is active after 6 Seconds off.

NOTE: ImUSB charging mode is the intelligent voice control function. switched off.Switch to long mode.

Low Power Reminder:
not fully played.This means that the power consumption is low.Please Recharge via USB. The LED indicator lights up whenever the product is charging. will turn off automatically after it is fully charged. Note: Please fully charge the battery before use.


g-Reset
If the product is not functioning properly, please try pressing the reset button. Press to restart the clock.

Daily maintenance:
Please clean the watch with a soft cloth or a wipe. Keep the watch clean and dry so that it functions properly.

Environmental protection:
Electronic products should comply with applicable laws and regulations. be disposed of.Please bring the defective product to the nearest collection point. to dispose of it.

Please do not disassemble the product yourself! Do not use the wrong battery. This can lead to an explosion hazard!

6

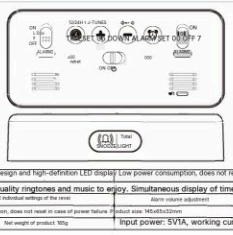

Simple design and high-definition LED display Low power consumption, does not require external power supply Press the "ALARM" button to access the alarm 2 ringtone section

13 high-quality ringtones and music to enjoy. Simultaneous display of time and temperature.	
3 individual settings of the reve	Alarm volume adjustment
Memory function, does not reset in case of power failure. Product size: 145x65x32mm	
Net weight of product: 165g	Input power: 5V1A, working current: 110mA.

Power on:
When you turn the button to "on".The alarm clock is active.

Set the time:
Press the "TIME SET" button for 3 seconds. The time icon will start. Setting the alarm to "stop" will make the alarm icon disappear. Touch the screen, Press the +/- buttons to set the time.Press New on the TIME SET key, the minutes icon will flash on the screen. Press the +/- buttons to set the minutes.Appuyezza is new on the Press "TIME SET" to complete the operation.

Charging:
Only use a USB cable or 5V-1A/ 5V-2A adapter for charging. the alarm clock (5v-1A is the best).A higher power adapter may brûles les circuits du produit.

7