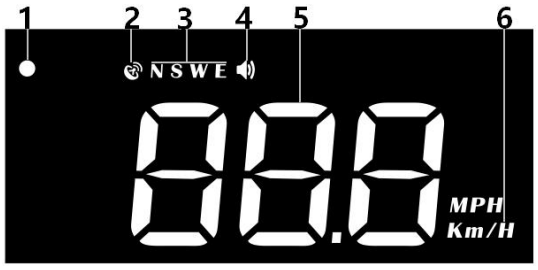
GPS speed meter M1

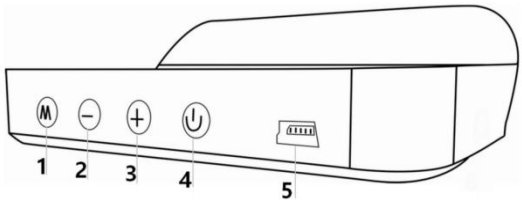
Warning: product working voltage is 5V, and it is forbidden to use a voltage higher than 5V for power supply.

Display functions:



1. **Light sensor**: HUD can automatically adjust the brightness according to the environment
2. **Satellite icon**: After the satellite is found, it stops flashing and goes out before it can be used normally
3. **Compass**: N (North) E (East) W (West) S (South)
4. **Buzzer**
5. **Vehicle speed display**: display the current vehicle speed
6. **Speed unit**: MPH- mile, KM/H- kilometer

Button functions：



Short press (1 second)
Long press 5s until the display image comes

1. **Short Press** Ⓜ

To switch vehicle speed, satellite number, enter into menu setting to switch menu options or parameter values

Long PressⓂ

To enter into menu settings (see instructions for Menu 1-6) and press 5 seconds to save and exit

2. **Short Press** ⊖

After entering the settings, Menu - and parameter value -

Long Press ⊖

To turn on and off the buzzer (default choice is buzzer on,you can freely choose to turn on or off)

3. **Short Press** ⊕

After entering the settings, Menu + and parameters value +

Long Press ⊕

The screen is all on, and the fault code is eliminated, long press again to exit

4. **Power switch** ⏻

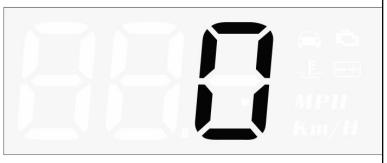

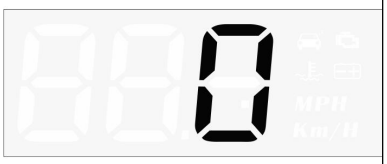
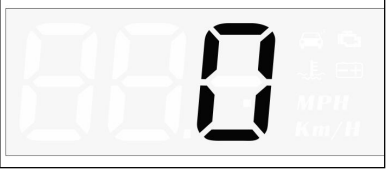
Long press for 5s to turn off, again to turn on

5. **OBD connection port**

Enter setting:

Long press the Ⓜ to enter setting, short press ⊖ choose menu, short press Ⓜ to confirm, long press Ⓜ after adjustment to save and exit

Menu	Function	Range	Explanation	Default value	Setting screen
	Speed	50-150	Adjust the parameter value when there is an error between HUD and dashboard. Ex:dashboard displays 100 KM, HUD displays 105 KM. Please adjust the parameter value to 102.(107-5)	107	

	Over speed alarm	30-250	Over speed alarm is 150KM / H,users can freely set this value	150	
	Fatigue Driving Reminder	1.0-8.0	Fatigue driving reminder is 4 hours	4.0	
	Brightness level	0-11	0-automatic photosensitive mode 1-11 is manual adjustment	0	
	Speed unit	0-1	0=KM 1=MPH	0	
	Factory reset	0-1	The default value is 0. After adjusting to 1, long press Ⓜ to save and exit.	0	

GPS display FAQ:

1.The screen without any display, and no power

Check whether the USB cable is damaged, replace the USB cable for testing, and prohibit the use of voltage higher than 5V for power supply

2.Without car Speed

After HUD power-on, the satellite icon flashes will start to find the satellite. Please driving the car to the road. It will work after it stops flashing

3.Inaccurate Speed

a.First check the speed unit is correct or not, the speed unit including KM/H and MPH, please refer to the setting to switch the unit.

b.The car manufacturers usually make the dashboard speed 5-7% higher than the ECU. The international standard is based on satellite data.

(if the dashboard shows 100, and the device shows the 105, change the default value at 102)

4.Driving direction display error

After the vehicle speed exceeds 5KM / H, the direction can be displayed normally.

5. Speed is still displayed after the car stops

Under the underground parking lot, tunnel, under the overpass, there will be unstable satellite drift when there is obstruction.

6.Turn off the buzzer

Push left for 2 seconds to turn off the buzzer, do it again to turn on.