



Step 1 Installatiom

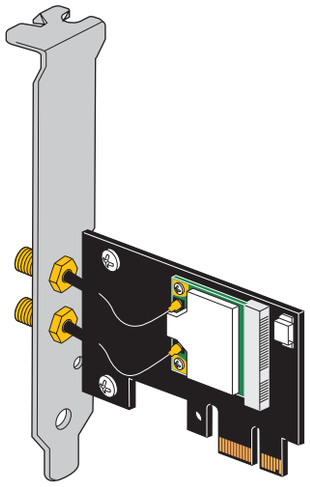

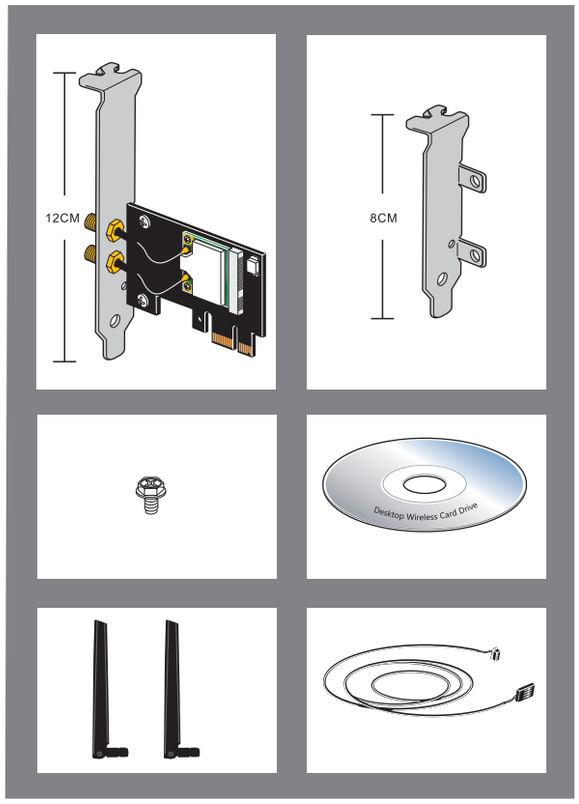



1

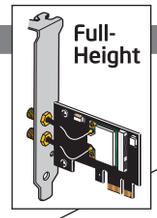


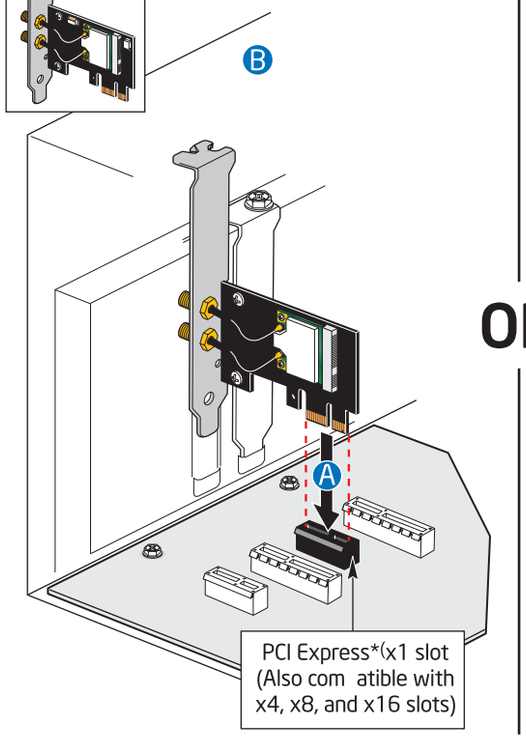

OR

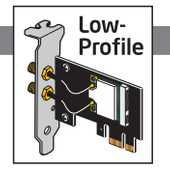


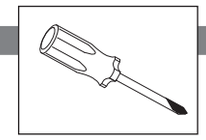

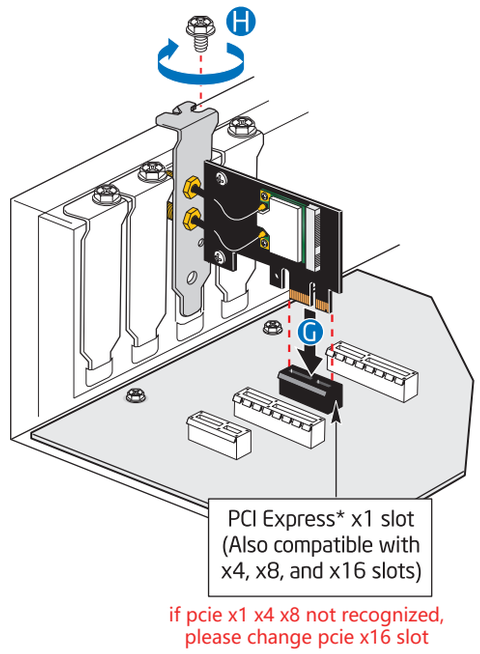


if pcie x1 x4 x8 not recognized,
please change pcie x16 slot


2

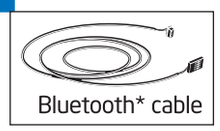

if there is bluetooth function

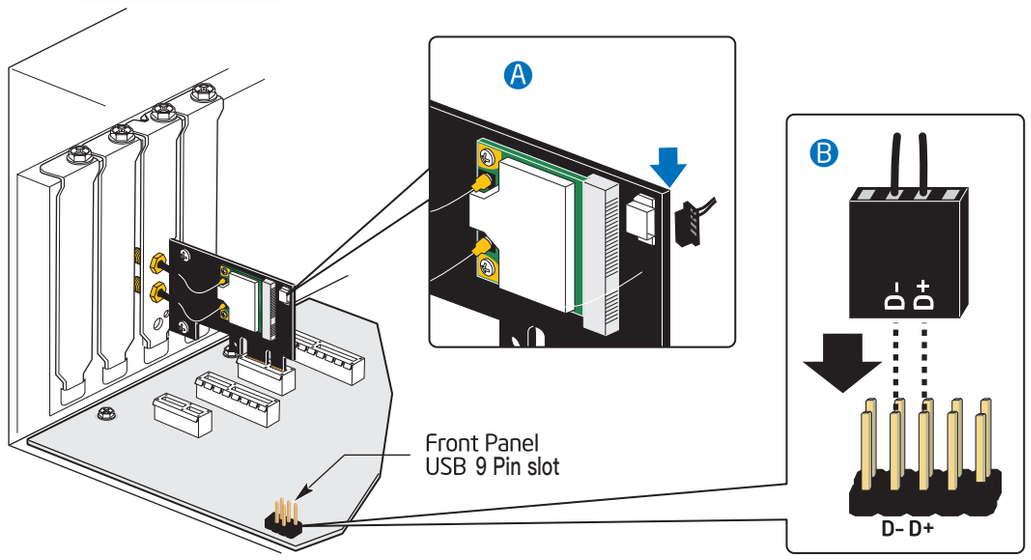


3

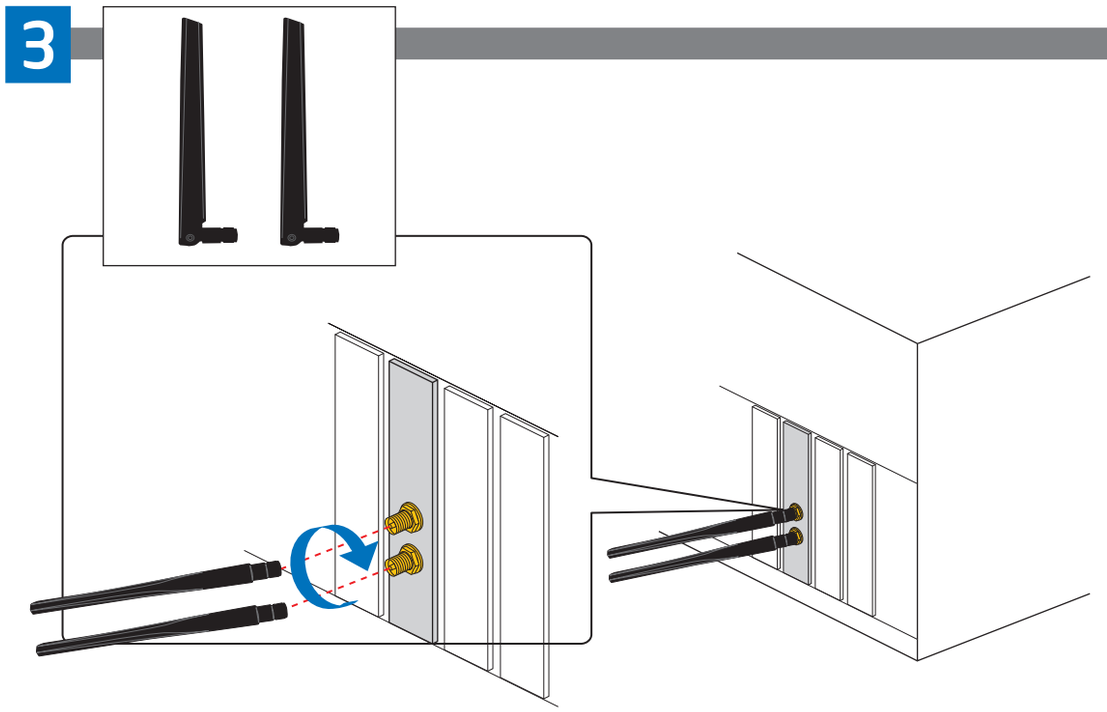


Step 2 Driver Installation


A: Insert the resource CD, browse the CD and double-click Setup.exe
You can also download the driver and utility at www.fenvi.cn

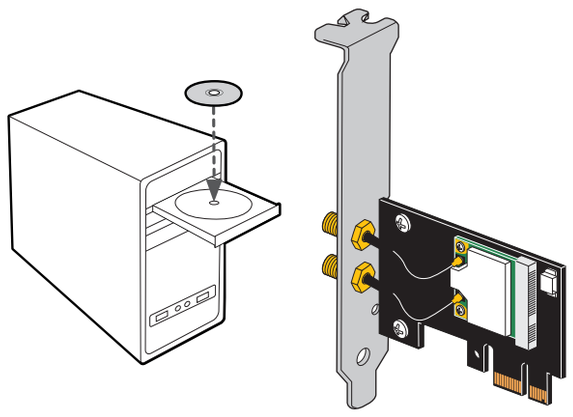

B: The Wireless Setup Software will pop up. Click Install to continue and follow the instructions to finish. Then restart the computer to complete the installation.

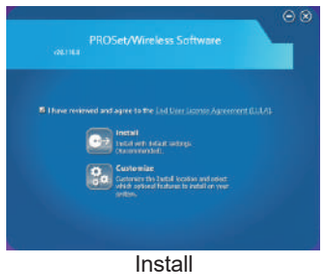


Install

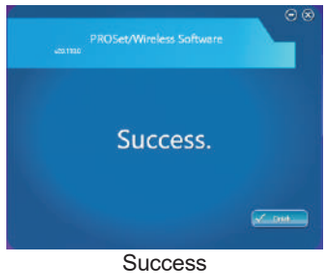

Success

Step 3 Wireless Connection

For Windows Users(Win 10/11)

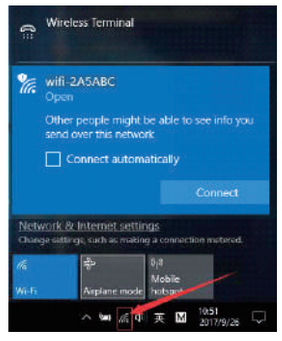

1 . Click on the Wi-Fi icon on the taskbar;

2. Select SSID connection.

Driver Download: www.fenvi.com

